# **AKPPHELP.RU** Руководство по ремонту АКПП



TRANSMISSION PARTS

Instructions

## **Spring Adjuster Kit**

## Part No.

# 15741-48K

• Spring Adjusters (4)

• O-Rings (6)

2 extra

**NOTE:** This kit fits the following applications: TF-60SN: BMW 6F21WA, VW/Audi 09G. 09K, 09M units

TF80SC: Volvo (AM6), Opel (AF40), Peugeot (TF80), Saab (AF40/6)

& Land Rover (TF80)

TF81SC: Ford (AF21), Mazda (AW6A-EL)

#### Also Available

### Oversized C1 Clutch **Control Valve Kit**

15741-25K TF-60SN, TF-80SC & TF-81SC

### **Oversized K2 Clutch Control Valve Kit**

15741-05K TF-60SN

### Oversized K3 Clutch **Control Valve Kit**

15741-08K TF-60SN

## **Oversized B1 Brake Control Valve Kit**

15741-22K TF-60SN

## **Oversized C2 Clutch Control Valve Kit**

39741-05K TF-80SC & TF-81SC


## **Oversized C3 Clutch Control Valve Kit**

39741-08K TF-80SC & TF-81SC

### **Oversized B1 Band Control Valve Kit**


39741-22K TF-80SC & TF-81SC

## Aisin AW TF-60SN, TF-80SC, TF-81SC

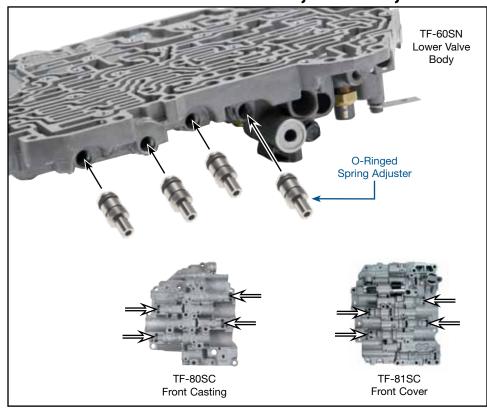

#### 1. Disassembly

- a. Remove OE spring adjuster retaining clip and save for reuse.
- b. Take and record reference dimension at each spring adjuster location. Measure from the end of the spring adjuster to the casting (Figure 1). This measurement will be required when assembling the new spring adjuster.
- b. Remove and discard OE spring adjuster.
- c. Remove the OE spring and save for reuse.

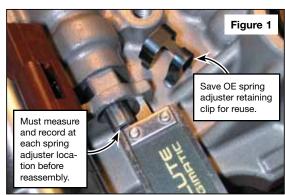

©2012 Sonnax Industries, Inc. 15741-48K-IN 11-19-12



# AKPPHELP.RU Руководство по ремонту АКПП

#### TRANSMISSION PARTS

**SPRING ADJUSTER KIT 15741-48K** 

Instructions

#### 2. Installation & Assembly

- a. Install the Sonnax O-ring into the shallow groove on the Sonnax spring adjuster (**Figure 2**).
- b. Slide the OE spring over the small boss on the Sonnax spring adjuster.
  Make sure the I.D. of the spring is seated over the small boss (Figure 2) and not hung-up on it (Figure 3).
- c. Install the Sonnax spring adjuster and OE spring assembly and adjust to the reference dimension recorded in disassembly procedure, then install the OE retaining clip.

#### NOTES:

- Each adjuster location may have a different referenced dimension, be sure to use the correct dimension for each location.
- Due to spring wrap up on installation, the valve will have to stroke a few times to restore OE spring position and rate. This can be done manually or will occur after a short test drive.
- Adaption: The vehicle will have to obtain operating temperature of more than 185°F/85°C to initiate re-adaption after any adjustments.

#### 3. Final Testing

Vacuum testing over the adjuster spring holds a minimum of 12 in-Hg. Use Sonnax test plate to cover and seal each of the four outlined areas in each valve body to preform a vacuum test.

